 


REPLACEMENT ELEMENTS

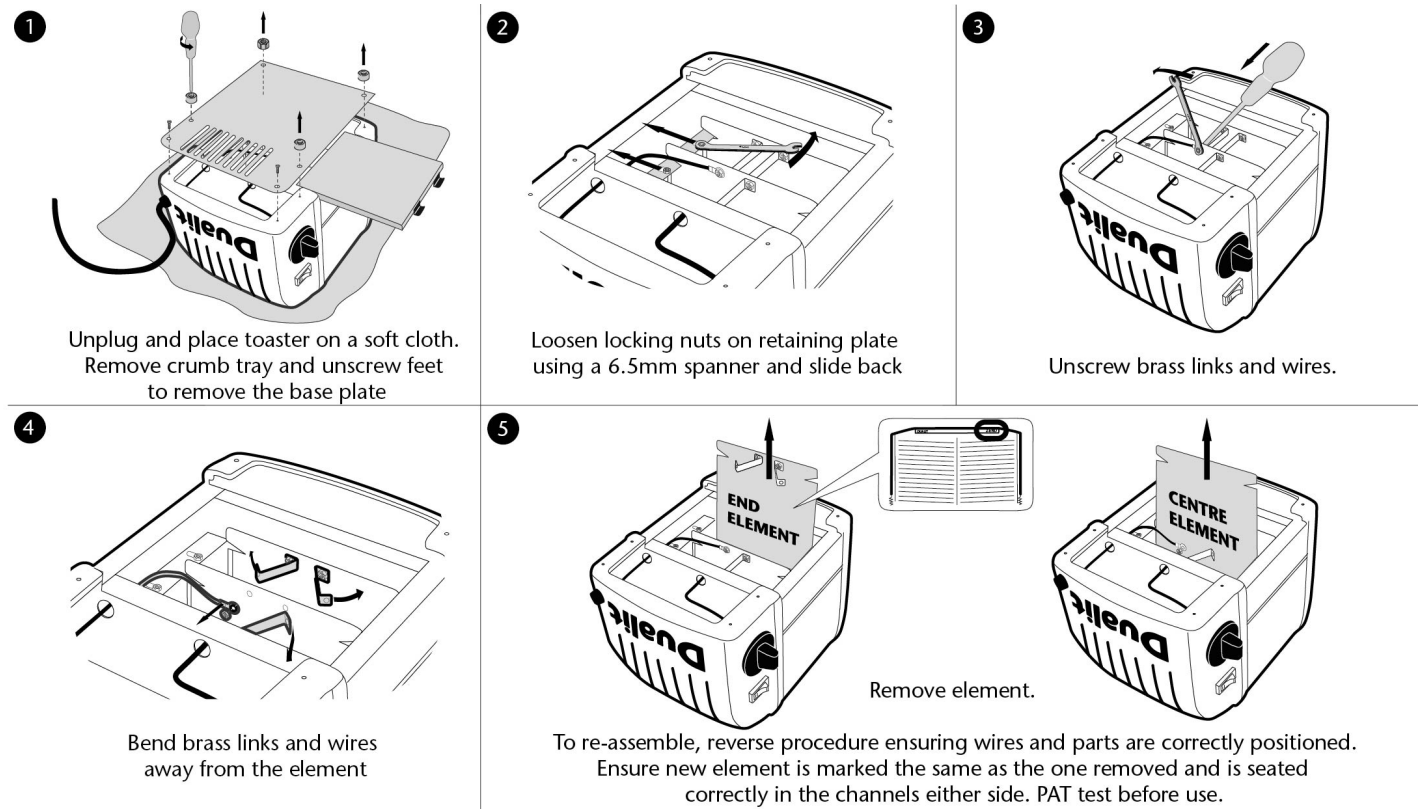

GUARANTEE

This appliance is of excellent quality and construction. However, if any defects in materials or workmanship do appear during the relevant Guarantee period, we will, at our discretion, either repair or replace the defective parts, free of charge, subject to the terms and conditions of our Guarantee shown below.

This Guarantee covers both parts and labour. Carriage is not included.

Your Guarantee period is as follows:

- 1 year

This Guarantee provides benefits which are additional to, and do not affect, your statutory rights. This guarantee does not cover the cost of returning the product to the dealer from whom it was purchased or to ourselves. This Guarantee applies only to products sold and located in mainland Great Britain. It does not cover liability in respect of or replacement of plugs, cables or fuses and also does not cover defects due to:

- Failure to use or maintain product in accordance with Dualit's instructions
- The product being connected to an unsuitable electricity supply
- Accidental damage to or abuse or misuse of the product
- The product has not been modified except by Dualit or approved agent
- Dismantling of or interference with the product
- Accidental breakage or damage
- Operational misuse, wear and tear from normal usage, incorrect adjustment and neglect
- Incorrect installation, maintenance, modification or unauthorized service work

- Theft or attempted theft of the product

Before returning any product under this Guarantee, please check that:

- You have followed the product instructions correctly
- Your mains electricity supply is functional
- The defect is not due to a blown fuse

If you wish to claim under this Guarantee you should:

- Send the product, postage or carriage paid, to the dealer from whom it was purchased or to Dualit direct
- Ensure that the product is clean and packed carefully (preferably in its original carton)
- Enclose details of your name, address and telephone number and when and where the product was purchased, together with proof of purchase (e.g. a till receipt).
- Give exact details of the nature of the defect

This Guarantee does not cover any other claims whatsoever, including, without limitation, any liability for incidental, indirect or consequential damage, nor does it cover any claims for conversion or modification or for the costs of repair carried out by any third party without the prior consent of Dualit. If replacement parts are fitted to the product this will not extend the period of the Guarantee.

For further advice contact the Dualit Customer Helpline on: +44 (0)1293 652 500 (09:00 to 17:00 Monday to Friday).

 
Dualit®

Please carefully read this manual before using this product.
Make sure you are familiar with all of the safety and usage instructions.

Keep this manual in a safe place for future reference.

Installation and Operating Manual

Sandwich Toaster

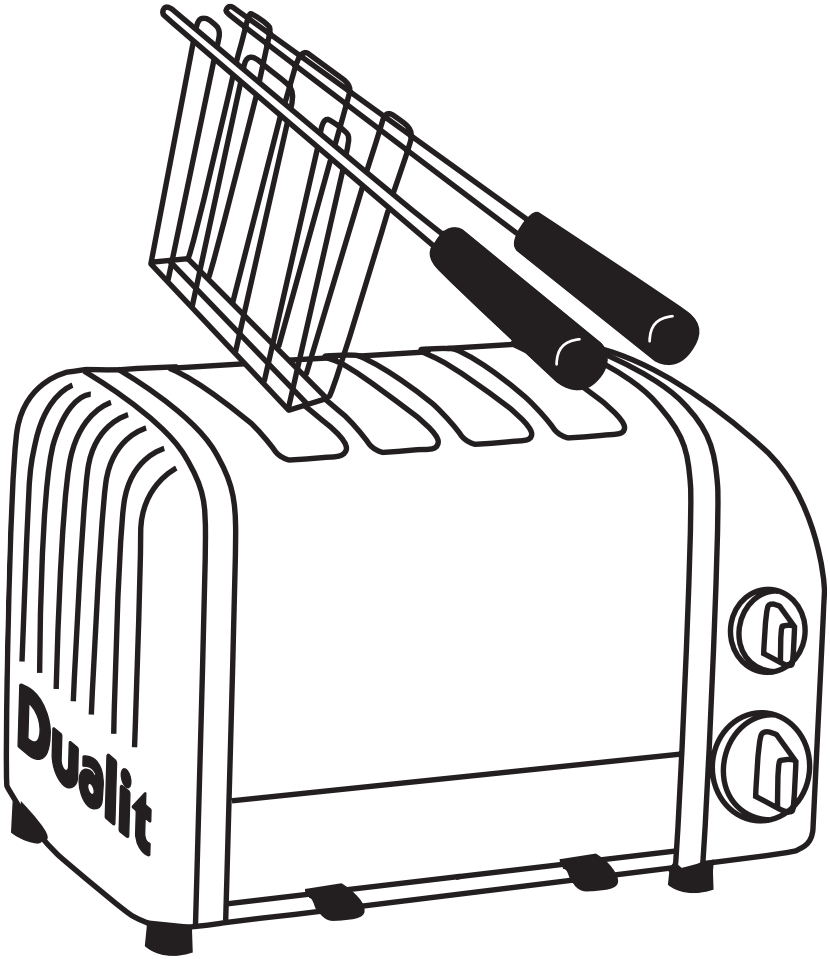

Contact Information

Dualit, County Oak Way, Crawley, West Sussex, RH11 7ST

Customer Helpline: +44 (0) 1293 652 500 (9am - 5pm Monday to Friday) • Fax: +44 (0) 1293 652 555

Email: info@dualit.com • www.dualit.com



SAFETY INFORMATION



READ ALL INSTRUCTIONS

Before using the toaster .Keep these instructions for future reference.

- **WARNING:** This appliance must be earthed.
- We recommend that the toaster is plugged into a socket that has no other appliance connected to it. Failure to do this may cause an overload, trip a circuit breaker or blow a fuse. Preferably the socket outlet should be protected by a Residual Current device (RCD).
- Before plugging in, check that the voltage on the rating label is the same as the mains supply.
- To protect against electric shock, do not immerse any part of this product in water or other liquid.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate the appliance with a damaged cord or plug.
- Do not allow cable to touch hot surfaces, or to hang over edge of a table or counter top.
- When in use a fire may occur if the toaster is covered or touching flammable material.
- Do not attempt to dislodge bread when the toaster is plugged in.
- Bread may burn. Therefore toasters must not be used near or below curtains and other combustible materials.
- When toasting do not leave appliance unattended.

THIS IS AN ATTENDED APPLIANCE

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental

capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with this appliance.
- Do not store toaster in an appliance garage or under cupboards.
- Do not use outdoors.
- The toaster is not intended to be operated by means of an external timer or separate remote-control system.
- Accessible surfaces of the toaster may get hot during use.
- **NOTE:** Any plug cut from power supply cord should be disposed of immediately. Inserting any cut off plug into a 13A socket-outlet is hazardous.
- Never use the plug without the fuse cover fitted. Ensure replacement fuse is the same current value as original.
- Replacement fuses should be ASTA approved to BS 1362.
- Do not operate any appliance with a damaged lead or plug, or after the appliance malfunctions, or has been damaged in any manner.

 
If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

SAVE THESE INSTRUCTIONS



Accessible surfaces of the toaster may get hot during use.

THE SANDWICH TOASTER

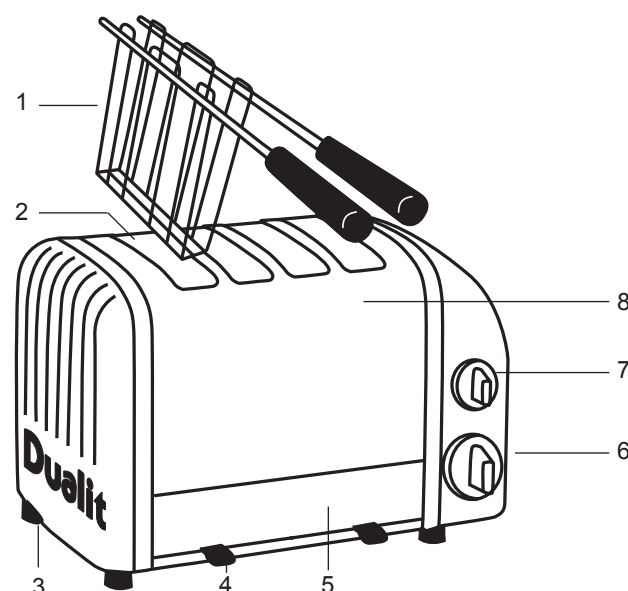

1. Sandwich cages.
2. 28mm wide slots - Fit sandwiches or large buns in these super wide slots.
3. Adjustable foot - can be raised or lowered to compensate for uneven surfaces.
4. Crumb tray - Removable easy clean tray catches drips of crumbs.
5. Ejector knob - Manually eject buns from the slots.
6. Mechanical timer - on/off control with countdown timer.
7. Slot selector switch - select which slots will heat up.
8. Stainless steel cover - easy clean durable cover.

USING A SANDWICH TOASTER

- The sandwich toasters are supplied with Sandwich cages. Additional cages can be purchased as an accessory.
- Using medium sliced bread, lightly butter one side of each slice and place filling between un-buttered sides. Use the sandwich cage recipe book for various ideas. Pre-sliced or grated cheeses work best.
- Place sandwich into a cage and insert into one of the slots.
- The two slot sandwich toaster uses two timer dials. (The top one switches on the left hand slot and the bottom one switch the right hand slot).
- The four slot has a 3 position rotary switch to select 1,2 or 4 slots and a single timer.
- Set timer dial for each loaded slot to between no. 2.5 and no. 3.5 according to the darkness required. After the toaster has warmed up, reduce time by half a number (Usually after 2 or 3 cycles).
- The timer dial turns off automatically after the selected time cycle has finished or can be reset manually by turning the timer knob back to the off position.
- The sandwiches will keep warm inside the toaster until removed for serving.

- See the included recipe booklet for lots of inspirational ideas.
- Always lightly butter the **OUTER** sides of the sandwich as this will make the filling hotter.
- We recommend the use of 1 or 2 day old bread. Slices should be cleanly cut & not ragged edged.
- Very thinly sliced bread may produce uneven toasting.
- Do not force in thick slices of bread as you may experience difficulty in ejecting them. Never insert broken pieces of bread.
- If heated slots are left empty the adjacent slots will toast unevenly.

CAUTION: Heating up slots that have not been loaded with bread may damage the elements and will cause uneven toasting. Do not use the toaster if the crumb tray or base plate are missing or are incorrectly fitted and never cover the top of the toaster or use as a hot plate. Always unplug the toaster when not in use.

CLEANING

Cleaning and maintaining your toaster on a regular basis will keep it shining and prolong the life of your machine.

- **IMPORTANT:** Always unplug the toaster and allow to cool down before performing any cleaning.
- Remove crumb tray & clean daily.
- Crumbs should be carefully brushed off the elements (using only a soft brush), the toaster turned upside down and shaken out.
- Never insert a fork or other sharp instrument to remove torn pieces of bread as the heating elements may be damaged.
- Use a microfiber or damp cloth to wipe off the outside surfaces of the toaster. Do not use any cleaner on the end castings, wipe and dry.
- A stainless steel polish can be used to restore shine but this must not be an aggressive cleaner or contain ammonia and should only be used on the stainless steel cover.
- This appliance must not be immersed in water or cleaned with a water jet.
- Sandwich cages are dishwasher safe or can be washed in warm soapy water. Do not use abrasive cleaners.
- Empty the crumb tray on a daily basis, do not allow crumbs to build up.

REPLACING ELEMENTS

Spares for your Dualit toasters are available by mail order, call us on 01293 652 500 for more details.

- Servicing must only be carried out by Dualit authorised service agent or a competent electrician.
- For your own protection only use original Dualit spares.
- When replacing ProHeat elements, only use genuine Dualit elements (stamped "DUALIT") the safety and the performance of the toaster cannot be guaranteed if inferior elements are used. Fitting of non Dualit parts will also invalidate the guarantee.
- A. Disconnect toaster from mains.
- B. Remove the crumb tray.
- C. Unscrew feet and remove base
- D. Loosen the two nuts and slide back element retaining strip.
- E. Note the position of the connecting links and wires, then unscrew nuts which secure them to the broken element, bend back the connecting links, pull out the old element and slide in the new element. Fasten connecting links back to their original position by tightening the nuts.
- F. Slide back element retaining strip and tighten nuts.
- G. Make sure that you have the high wattage elements marked "CENTRE" or low wattage elements marked "END". Different toasters have different element configurations, if you are unsure please call the dualit helpline on 01263 652 500.
- H. Refit base plate, feet and crumb tray.